

Aero Design Ltd.**Work Order Control Sheet**Work Order#: 2015-22 Date Opened: 25 Feb 2015 Title: AssemblyAircraft OEM: Bell Aircraft Model: 206L/407 Product Type: Cargo Basket Product Model: Wide Quantity: 1**Work Order Contents**

Work Order/Build Sheets (Procedures Provided)
Additional Work Sheets (Standard Practice)
Drawings (See List Below)
Parts Distribution Sheet
Sub Component Tags
Completed Certification (Original)
Time Sheet (R&D)
Notes

Initial or N/A

JR
N/A
JR
JR
N/A
JR
N/A
N/A

Build Sheet Contents

Tasks Initialled
Dual Inspections Initialled

Initial or N/A

JR
JR

Drawing List

Drawing #	Rev #	Description	Initial or N/A
94510	0	Basket	JR
94511	0	Body	JR
94521	0	Regular Mount Hoop	JR
94527	0	Data Plate	JR

Traveller

Install walkway on lid
Install lid on basket body
Re-tap mounting lug holes and install mount lugs
Install handle brackets
Install handle
Install lid prop
Install data plate

Initial or N/A

MR
MR
MR
MR
MR
MR
MR

Component Completion

Quantity Complete on This Work Order
Quantity Incomplete on This Work Order
Further Processing Required Before Release
Release to Stock as Components

As Instructed

1
N/A
N/A
N/A

Certification

Form One Completed
Serviceable (Green) Tag Completed
In Process (Yellow) Tag Completed
Unserviceable (Red) Tag Completed
Parts Placed in Stores for Distribution

Initial or N/A

JR
N/A
N/A
N/A
N/A

Additional Documentation

Documentation of a minor change
Non-Conformance Report Required
Service Difficulty Report Required

Initial or N/A

N/A
N/A
N/A

Billing

Local (Aero Design)
Research and Development
Third Party

Initial or N/A

JR
N/A
N/A

Work performed by:

Print: J Rekve for M Rekve

Sign: 

SCA: AD01

Date: 26-Feb-15

ICC / Dual Inspection performed by:

Print: Jason Rekve

Sign: 

SCA: AD01

Date: 26-Feb-15

Work Order closed by:

Print: Jason Rekve

Sign: 

SCA: AD01

Date: 01-Mar-15

Approved Manufacturing Facility 73-04

Form 20.D.03

Rev. Original 23 Sep 2014



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity:

2

PN:

49320-01

Model: All

Aircraft:

All

Description:

Barrel Nut

Supplier:

Aero Design

Color:

N/A

PO# N/A

NO#:

2014-14

CARGO BASKET ASSEMBLY - COMMON

B 206L/407 X-WIDE

wo 2015-22

General

These instructions apply to all cargo basket assemblies. Refer to the following drawings, at the current revision, for dimensions and details:

Bell 206L/407 – Right side only

69810, Revision 3 – Standard Low Mounted Basket
94510, Revision 0 – Extra-Wide Low Mounted Basket
94610, Revision 0 – Extra-Wide Low Mounted Ski Basket
76610, Revision 0 – High Mounted Ski Basket

Eurocopter AS350/AS355 – left or right

77610, Revision 1 – Short Basket
76410, Revision 3 – Medium Basket (left or right)
78410, Revision 2 – Long Basket
94010, Revision 0 – Extra Large (ski) Basket

Robinson R44 – left or right

90610, Revision 0 – Standard Basket (left or right)

Bell 206B – right side only

80210, Revision 0 – Short Basket
80310, Revision 0 – Medium Basket
81110, Revision 0 – Long Basket

Bell 429 – right or left

95911, Revision 0 – Standard Basket

Bell Medium – left or right

75111, Revision 0 – Standard Basket
95511, Revision 0 – Extra Large (ski) Basket

MD600

82811, Revision 0 – Standard Basket

Options

70405, Revision 3? – Lid Walkway

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

Work Order: _____

Date Open: _____

1. Lid Assembly

4002

- a. Install lid bumpers on bottom.
 - i. Fill bumper holes with RTV silicone sealant.
 - ii. Insert 49205-14 lid bumper, 3 or 4 places per lid.
- b. Install placard on bracket on top of lid.
 - i. Locate placard on bracket.
 - ii. Drill #30 through placard and bracket, using holes in placard.
 - iii. Remove placard and de-burr holes in placard and on bracket.
 - iv. Locate placard on bracket, and cleco in place.
 - v. Rivet placard with four CR3213-4-02 CherryMax rivets.
- c. Option: Install walkway on top of lid (lid must be fitted with walkway provisions)
 - i. Note: avoid touching surface of tread plate with bare hands to prevent smudges or marks on the top surface.
 - ii. Pull tread plate from stock. Shear tread plate to length.
 - iii. De-burr edges of tread plate with scotch-brite disc on die-grinder.
 - iv. Locate tread plate on lid. Hold tread plate in place with bags of lead shot.
 - v. Mark and drill #30 holes:
 1. 0.25" from edge of tread plate, centre on cross members (0.38")
 2. 0.25" from edge of tread plate, middle of each walkway stringer
 - vi. De-burr and counter-bore (if required to provide clearance of rivet head on checker pattern) all holes in tread plate using 1/4" piloted counter bore on both sides.
 - vii. De-burr holes in lid tubes.
 - viii. Apply bead of RTV silicone sealant along all tubes under tread plate.
 - ix. Set tread plate in place, secure with clecos if necessary.
 - x. Rivet placard with CR3213-4-02 CherryMax rivets
- d. Record PO/WO of all parts (including lid) used in steps above on attached material tracking list.

2. Body Assembly

4006

- a. Install attachment fittings
 - i. Carefully remove excess powder coat from around attachment lug threads using a countersink.
 - ii. Run 3/8-24 tap into attachment lugs to clear threads.
 - iii. Apply anti-seize compound to attachment fittings 96710-01 (alternate: Ancra 40088-14)
 - iv. Install attachment fittings with two NAS1149F0363P washers in four lugs in basket.
 1. 90610 (Robinson R44) basket only:
 - a. Install 1 fitting 906?? in lower forward attachment lug only.
 - b. Install 3 96710-01 fittings in remaining locations.
 - v. Torque to ??

- b. 946 Basket Only: Install Cutout Brace – *must be completed after hinge installation*
 - i. Locate 94621-01 Brace over aft cross tube cutout
 - ii. Install two AN4-6A bolts and two AN4-30A bolts with NAS1149F0463P washers.
 - iii. Torque AN4 bolts to ??
- c. Record PO/WO of all parts (including basket) used in steps above on attached material tracking list.

3. Hinge Installation

ABD

- a. Prepare hinge.
 - i. Cut hinge to length:
 - 1. 776, 906 – 54"
 - 2. 751, 803 – 70"
 - 3. 698, 764, 945 – 72"
 - 4. 784 – 90"
 - 5. 940, 946, 959 – 95"
 - ii. Drill #30 pilot holes using hinge jig. For long hinges, flip at specified location on jig.
- b. Install hinge on basket
 - i. Locate hinge on basket (standard baskets)
 - 1. centre fore/aft
 - 2. 0.15" – 0.18" up from bottom edge
 - ii. Locate hinge on basket (extra wide baskets)
 - 1. centre fore/aft
 - 2. set hinge at 90 degrees (as if lid would be installed) using a small square, locate vertical side at 22.5" from outboard edge.
 - iii. Drill #30 through holes in hinge into basket rim. Cleco in place with 1/8 (copper) clecos.
 - iv. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 (black) clecos.
 - v. Remove hinge and de-burr holes in hinge and basket rim.
 - vi. Cleco hinge to basket with 5/32 clecos.
 - vii. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations
- c. Install lid on basket
 - i. Locate lid on hinge (all baskets)
 - 1. center fore/aft
 - 2. 0.15" – 0.18" down from top edge
 - ii. Drill #30 through holes in hinge into lid rim. Cleco in place with 1/8 clecos.
 - iii. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 clecos.
 - iv. Remove hinge and de-burr holes in hinge and lid rim.
 - v. Cleco lid to hinge with 5/32 clecos.
 - vi. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

- d. Record PO of hinge and rivets on attached material tracking list.

4. Install Handle

406L

- a. Install handle brackets.
 - i. Set 84267-01 handle bracket on provisions in hoops, 2 places.
 - ii. Install AN3-11A bolt, NAS1149F0363P washer (2), MS21044N3 nut. Two places per bracket, two brackets per basket.
 - iii. Torque AN3 bolts to ??.
- b. Install handle
 - i. Trim 36278-01R and 36278-01L springs to ensure end of spring does not extend past edge of handle bracket, approximately 1/8". Set springs over bushing of 84261-01 handle assembly.
 - ii. Grease two 36275-01 bushings with ???. Insert into bushings of handle assembly.
 - iii. Locate handle on basket lid. Insert AN3-12A bolt with NAS1149F0363P through bracket on lid and handle bushing on one end of handle.
 - iv. On other end of handle, hook spring over catch rivet on handle assembly and use spring tool to twist spring to catch arm on bracket on lid while inserting AN3-12A bolt with NAS1149F0363P washer through lid bracket and handle bushing.
 - v. At first end, remove bolt and repeat step iv.
 - vi. Install NAS1149F0363P washer and MS21044N3 nut on both AN3-12A bolts.
 - vii. Torque AN3 bolts to ??.
- c. Check handle
 - i. Operate handle to ensure handle does not bind and springs hold handle in.
 - ii. Snap handle into brackets to ensure handle locks.
- d. Record PO/WO of all parts used in steps above on attached material tracking list.

5. Install lid brace

4006

- a. Locate 36280-01 lid brace on bushing in basket. Ensure brace is on forward end of basket as it will be installed on the helicopter.
- b. On lid end, insert AN970-3 washer into end of lid brace. Insert AN3-15A bolt with NAS1149F0363P washer through AN970-3 washer, lid prop, and lid bushing. Install NAS1149F0363P washer and MS21044N3 nut on bolt.
- c. On basket end, insert AN3-17A bolt with AN970-3 washer through lid prop and basket bushing. Install NAS1149F0363P washer and MS2144N3 nut on bolt.
- d. Ensure brace is seated on lip of bushings before tightening nuts.
- e. Torque AN3 bolts to ??
- f. Record PO/WO of all parts used in steps above on attached material tracking list.

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

AK

6. Final Inspection

Dual inspection by a different person than assembled the basket.

a. Check for general condition and correct assembly:

- i. Bolts are tight
- ii. Rivets are installed correctly
- iii. Handle operates correctly
- iv. Lid brace operates correctly

b. Check that PO/WO numbers have been recorded.

Work Order: 2015-22Material Tracking Sheet
Bell 206L / 407
Extra Wide Basket Assembly

1 of 2

Date Opened: 25 FEB 2015

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
			94510-01	Cargo Basket Assembly		
Step 1				<i>Lid Assembly</i>	<i>2014-80</i>	
	. 1		69812-01	Basket Lid Assembly		
Step 1.a.	. . 3		49205-14	Bumper	Argus Industries Bumper	<i>NOT INSTALLED</i>
	. . A/R		--	Sealant	Commercial Silicone RTV sealant	
Step 1.b.	. . 1		94527-01	Placard	0.063 Sheet, 6061-T6 Aluminum	
	. . 4		CR3213-4-02	Cherry Rivet		
Step 1.c.	. 1		70405-01	Lid Step Modification		
(option)	. . 1		70405-04	Tread Plate	3003 Aluminum Tread Plate, 0.063"	<i>NOT INSTALLED</i>
	. . A/R		CR3213-4-02	Cherry Rivet		
	. . A/R		--	Sealant	Commercial Silicone RTV sealant	
Step 2				<i>Basket Assembly</i>	<i>2014-80</i>	
Step 2.a.	. 1		94511-01	Basket Body Assembly		
	. . 4		96710-01	Fitting	Alternate: Ancra 40088-14	<i>14048</i>
	. . 8		NAS1149F0663P	Washer		<i>15206</i>
Step 3				<i>Hinge Installation</i>		
	. 1		MS20001P4	Piano Hinge	72"	<i>NOT INSTALLED</i>
	. 8		CR3523-5-02	Cherry Rivet		
	. A/R		CR3213-5-02	Cherry Rivet		
Step 4	. 1	84255	84255-01	<i>Handle Installation</i>		
Step 4.a.	. . 2		84267-01	Bracket	Delrin, 3/4" Sheet	<i>205-02</i>
	. . 4		AN3-11A	Bolt		<i>14672</i>
	. . 8		NAS1149F0363P	Washer		<i>14672</i>
	. . 4		MS21044N3	Nut		<i>14672</i>

Work Order: 2015-22Material Tracking Sheet
Bell 206L / 407
Extra Wide Basket Assembly

2 of 2

Date Opened: 25 FEB 2015

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
Step 4.b.	. . 1		84261-01	Handle Assembly		
	. . 2		36278-01	Spring (1 left, 1 right)	304 Stainless, 1/16" Dia Music Wire	NOT
	. . 2		36275-01	Bushing	Brass, 5/16" Dia	INSTALLED
	. . 2		AN3-12A	Bolt		
	. . 4		NAS1149F0363P	Washer		
	. . 2		MS21044N3	Nut		
Step 5				Lid Brace Installation		
	. 1		36280-01	Brace Assembly		
	. 1		AN3-15A	Bolt		NOT INSTALLED
	. 1		AN3-17A	Bolt		
	. 2		AN970-3	Washer		
	. 3		NAS1149F0363P	Washer		
	. 2		MS21044N3	Nut		
Step 6				Inspection	None	

CARGO BASKET ASSEMBLY - COMMON

2015-22

General

These instructions apply to all cargo basket assemblies. Refer to the following drawings, at the current revision, for dimensions and details:

Bell 206L/407 – Right side only

69810, Revision 3 – Standard Low Mounted Basket
94510, Revision 0 – Extra-Wide Low Mounted Basket
94610, Revision 0 – Extra-Wide Low Mounted Ski Basket
76610, Revision 0 – High Mounted Ski Basket

Eurocopter AS350/AS355 – left or right

77610, Revision 1 – Short Basket
76410, Revision 3 – Medium Basket (left or right)
78410, Revision 2 – Long Basket
94010, Revision 0 – Extra Large (ski) Basket

Robinson R44 – left or right

90610, Revision 0 – Standard Basket (left or right)

Bell 206B – right side only

80210, Revision 0 – Short Basket
80310, Revision 0 – Medium Basket
81110, Revision 0 – Long Basket

Bell 429 – right or left

95911, Revision 0 – Standard Basket

Bell Medium – left or right

75111, Revision 0 – Standard Basket
95511, Revision 0 – Extra Large (ski) Basket

MD600

82811, Revision 0 – Standard Basket

Options

70405, Revision 3? – Lid Walkway

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

Work Order: _____

Date Open: _____

APC

1. Lid Assembly

- a. Install lid bumpers on bottom.
 - i. Fill bumper holes with RTV silicone sealant.
 - ii. Insert 49205-14 lid bumper, 3 or 4 places per lid.
- b. Install placard on bracket on top of lid.
 - i. Locate placard on bracket.
 - ii. Drill #30 through placard and bracket, using holes in placard.
 - iii. Remove placard and de-burr holes in placard and on bracket.
 - iv. Locate placard on bracket, and cleco in place.
 - v. Rivet placard with four CR3213-4-02 CherryMax rivets.
- c. Option: Install walkway on top of lid (lid must be fitted with walkway provisions)
 - i. Note: avoid touching surface of tread plate with bare hands to prevent smudges or marks on the top surface.
 - ii. Pull tread plate from stock. Shear tread plate to length.
 - iii. De-burr edges of tread plate with scotch-brite disc on die-grinder.
 - iv. Locate tread plate on lid. Hold tread plate in place with bags of lead shot.
 - v. Mark and drill #30 holes:
 1. 0.25" from edge of tread plate, centre on cross members (0.38")
 2. 0.25" from edge of tread plate, middle of each walkway stringer
 - vi. De-burr and counter-bore (if required to provide clearance of rivet head on checker pattern) all holes in tread plate using 1/4" piloted counter bore on both sides.
 - vii. De-burr holes in lid tubes.
 - viii. Apply bead of RTV silicone sealant along all tubes under tread plate.
 - ix. Set tread plate in place, secure with clecos if necessary.
 - x. Rivet placard with CR3213-4-02 CherryMax rivets
- d. Record PO/WO of all parts (including lid) used in steps above on attached material tracking list.

2. Body Assembly

APC

- a. Install attachment fittings
 - i. Carefully remove excess powder coat from around attachment lug threads using a countersink.
 - ii. Run 3/8-24 tap into attachment lugs to clear threads.
 - iii. Apply anti-seize compound to attachment fittings 96710-01 (alternate: Ancra 40088-14)
 - iv. Install attachment fittings with two NAS1149F0363P washers in four lugs in basket.
 1. 90610 (Robinson R44) basket only:
 - a. Install 1 fitting 906?? in lower forward attachment lug only.
 - b. Install 3 96710-01 fittings in remaining locations.
 - v. Torque to ??

- b. 946 Basket Only: Install Cutout Brace – *must be completed after hinge installation*
 - i. Locate 94621-01 Brace over aft cross tube cutout
 - ii. Install two AN4-6A bolts and two AN4-30A bolts with NAS1149F0463P washers.
 - iii. Torque AN4 bolts to ??
- c. Record PO/WO of all parts (including basket) used in steps above on attached material tracking list.

ABC

3. Hinge Installation

- a. Prepare hinge.
 - i. Cut hinge to length:
 - 1. 776, 906 – 54"
 - 2. 751, 803 – 70"
 - 3. 698, 764, 945 – 72"
 - 4. 784 – 90"
 - 5. 940, 946, 959 – 95"
 - ii. Drill #30 pilot holes using hinge jig. For long hinges, flip at specified location on jig.
- b. Install hinge on basket
 - i. Locate hinge on basket (standard baskets)
 - 1. centre fore/aft
 - 2. 0.15" – 0.18" up from bottom edge
 - ii. Locate hinge on basket (extra wide baskets)
 - 1. centre fore/aft
 - 2. set hinge at 90 degrees (as if lid would be installed) using a small square, locate vertical side at 22.5" from outboard edge.
 - iii. Drill #30 through holes in hinge into basket rim. Cleco in place with 1/8 (copper) clecos.
 - iv. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 (black) clecos.
 - v. Remove hinge and de-burr holes in hinge and basket rim.
 - vi. Cleco hinge to basket with 5/32 clecos.
 - vii. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations
- c. Install lid on basket
 - i. Locate lid on hinge (all baskets)
 - 1. center fore/aft
 - 2. 0.15" – 0.18" down from top edge
 - ii. Drill #30 through holes in hinge into lid rim. Cleco in place with 1/8 clecos.
 - iii. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 clecos.
 - iv. Remove hinge and de-burr holes in hinge and lid rim.
 - v. Cleco lid to hinge with 5/32 clecos.
 - vi. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations

- d. Record PO of hinge and rivets on attached material tracking list.

4. Install Handle

ADP

a. Install handle brackets.

- i. Set 84267-01 handle bracket on provisions in hoops, 2 places.
- ii. Install AN3-11A bolt, NAS1149F0363P washer (2), MS21044N3 nut. Two places per bracket, two brackets per basket.
- iii. Torque AN3 bolts to ??.

b. Install handle

- i. Trim 36278-01R and 36278-01L springs to ensure end of spring does not extend past edge of handle bracket, approximately 1/8". Set springs over bushing of 84261-01 handle assembly.
- ii. Grease two 36275-01 bushings with ??. Insert into bushings of handle assembly.
- iii. Locate handle on basket lid. Insert AN3-12A bolt with NAS1149F0363P through bracket on lid and handle bushing on one end of handle.
- iv. On other end of handle, hook spring over catch rivet on handle assembly and use spring tool to twist spring to catch arm on bracket on lid while inserting AN3-12A bolt with NAS1149F0363P washer through lid bracket and handle bushing.
- v. At first end, remove bolt and repeat step iv.
- vi. Install NAS1149F0363P washer and MS21044N3 nut on both AN3-12A bolts.
- vii. Torque AN3 bolts to ??.

c. Check handle

- i. Operate handle to ensure handle does not bind and springs hold handle in.
- ii. Snap handle into brackets to ensure handle locks.

- d. Record PO/WO of all parts used in steps above on attached material tracking list.

5. Install lid brace

OK

- a. Locate 36280-01 lid brace on bushing in basket. Ensure brace is on forward end of basket as it will be installed on the helicopter.
- b. On lid end, insert AN970-3 washer into end of lid brace. Insert AN3-15A bolt with NAS1149F0363P washer through AN970-3 washer, lid prop, and lid bushing. Install NAS1149F0363P washer and MS21044N3 nut on bolt.
- c. On basket end, insert AN3-17A bolt with AN970-3 washer through lid prop and basket bushing. Install NAS1149F0363P washer and MS2144N3 nut on bolt.
- d. Ensure brace is seated on lip of bushings before tightening nuts.
- e. Torque AN3 bolts to ??
- f. Record PO/WO of all parts used in steps above on attached material tracking list.

CARGO BASKET ASSEMBLY - COMMON

Complete
(initial or SCA #)

6. Final Inspection

Dual inspection by a different person than assembled the basket.

a. Check for general condition and correct assembly:

- i. Bolts are tight
- ii. Rivets are installed correctly
- iii. Handle operates correctly
- iv. Lid brace operates correctly

b. Check that PO/WO numbers have been recorded.

OK

Work Order: 2015-22

Material Tracking Sheet
Bell 206L / 407
Extra Wide Basket Assembly

1 of 2

Date Opened: 25-Feb-15

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
			94510-01	Cargo Basket Assembly		
Step 1				<i>Lid Assembly</i>		
	. 1		69812-01	Basket Lid Assembly		
Step 1.a.	. . 3		49205-14	Bumper	Argus Industries Bumper	15025
	. . A/R		--	Sealant	Commercial Silicone RTV sealant	
Step 1.b.	. . 1		94527-01	Placard	0.063 Sheet, 6061-T6 Aluminum	SN 94501-21
	. . 4		CR3213-4-02	Cherry Rivet		
Step 1.c.	. 1		70405-01	Lid Step Modification		
(option)	. . 1		70405-04	Tread Plate	3003 Aluminum Tread Plate, 0.063"	14074
	. . A/R		CR3213-4-02	Cherry Rivet		15014
	. . A/R		--	Sealant	Commercial Silicone RTV sealant	
Step 2				<i>Basket Assembly</i>		
Step 2.a.	. 1		94511-01	Basket Body Assembly		
	. . 4		96710-01	Fitting	Alternate: Ancra 40088-14	previously attached.
	. . 8		NAS1149F0663P	Washer		
Step 3				<i>Hinge Installation</i>		
	. 1		MS20001P4	Piano Hinge	72"	14091
	. 8		CR3523-5-02	Cherry Rivet		15022
	. A/R		CR3213-5-02	Cherry Rivet		14094
Step 4	. 1	84255	84255-01	Handle Installation		
Step 4.a.	. . 2		84267-01	Bracket	Delrin, 3/4" Sheet	} Previously attached
	. . 4		AN3-11A	Bolt		
	. . 8		NAS1149F0363P	Washer		
	. . 4		MS21044N3	Nut		


Work Order: _____

Material Tracking Sheet
 Bell 206L / 407
 Extra Wide Basket Assembly

2 of 2

Date Opened: _____

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
Step 4.b.	.. 1		84261-01	Handle Assembly	2015-42 / 14060 LW TUBE	
	.. 2		36278-01	Spring (1 left, 1 right)	304 Stainless, 1/16" Dia Music Wire	13085
	.. 2		36275-01	Bushing	Brass, 5/16" Dia	13050
	.. 2		AN3-12A	Bolt		
	.. 4		NAS1149F0363P	Washer		15031
	.. 2		MS21044N3	Nut		14072
Step 5				Lid Brace Installation		
	. 1		36280-01	Brace Assembly		
	. 1		AN3-15A	Bolt	14084	
	. 1		AN3-17A	Bolt	14048	
	. 2		AN970-3	Washer	15014	
	. 3		NAS1149F0363P	Washer	14072 15014	
	. 2		MS21044N3	Nut	14072	
Step 6				Inspection	None	

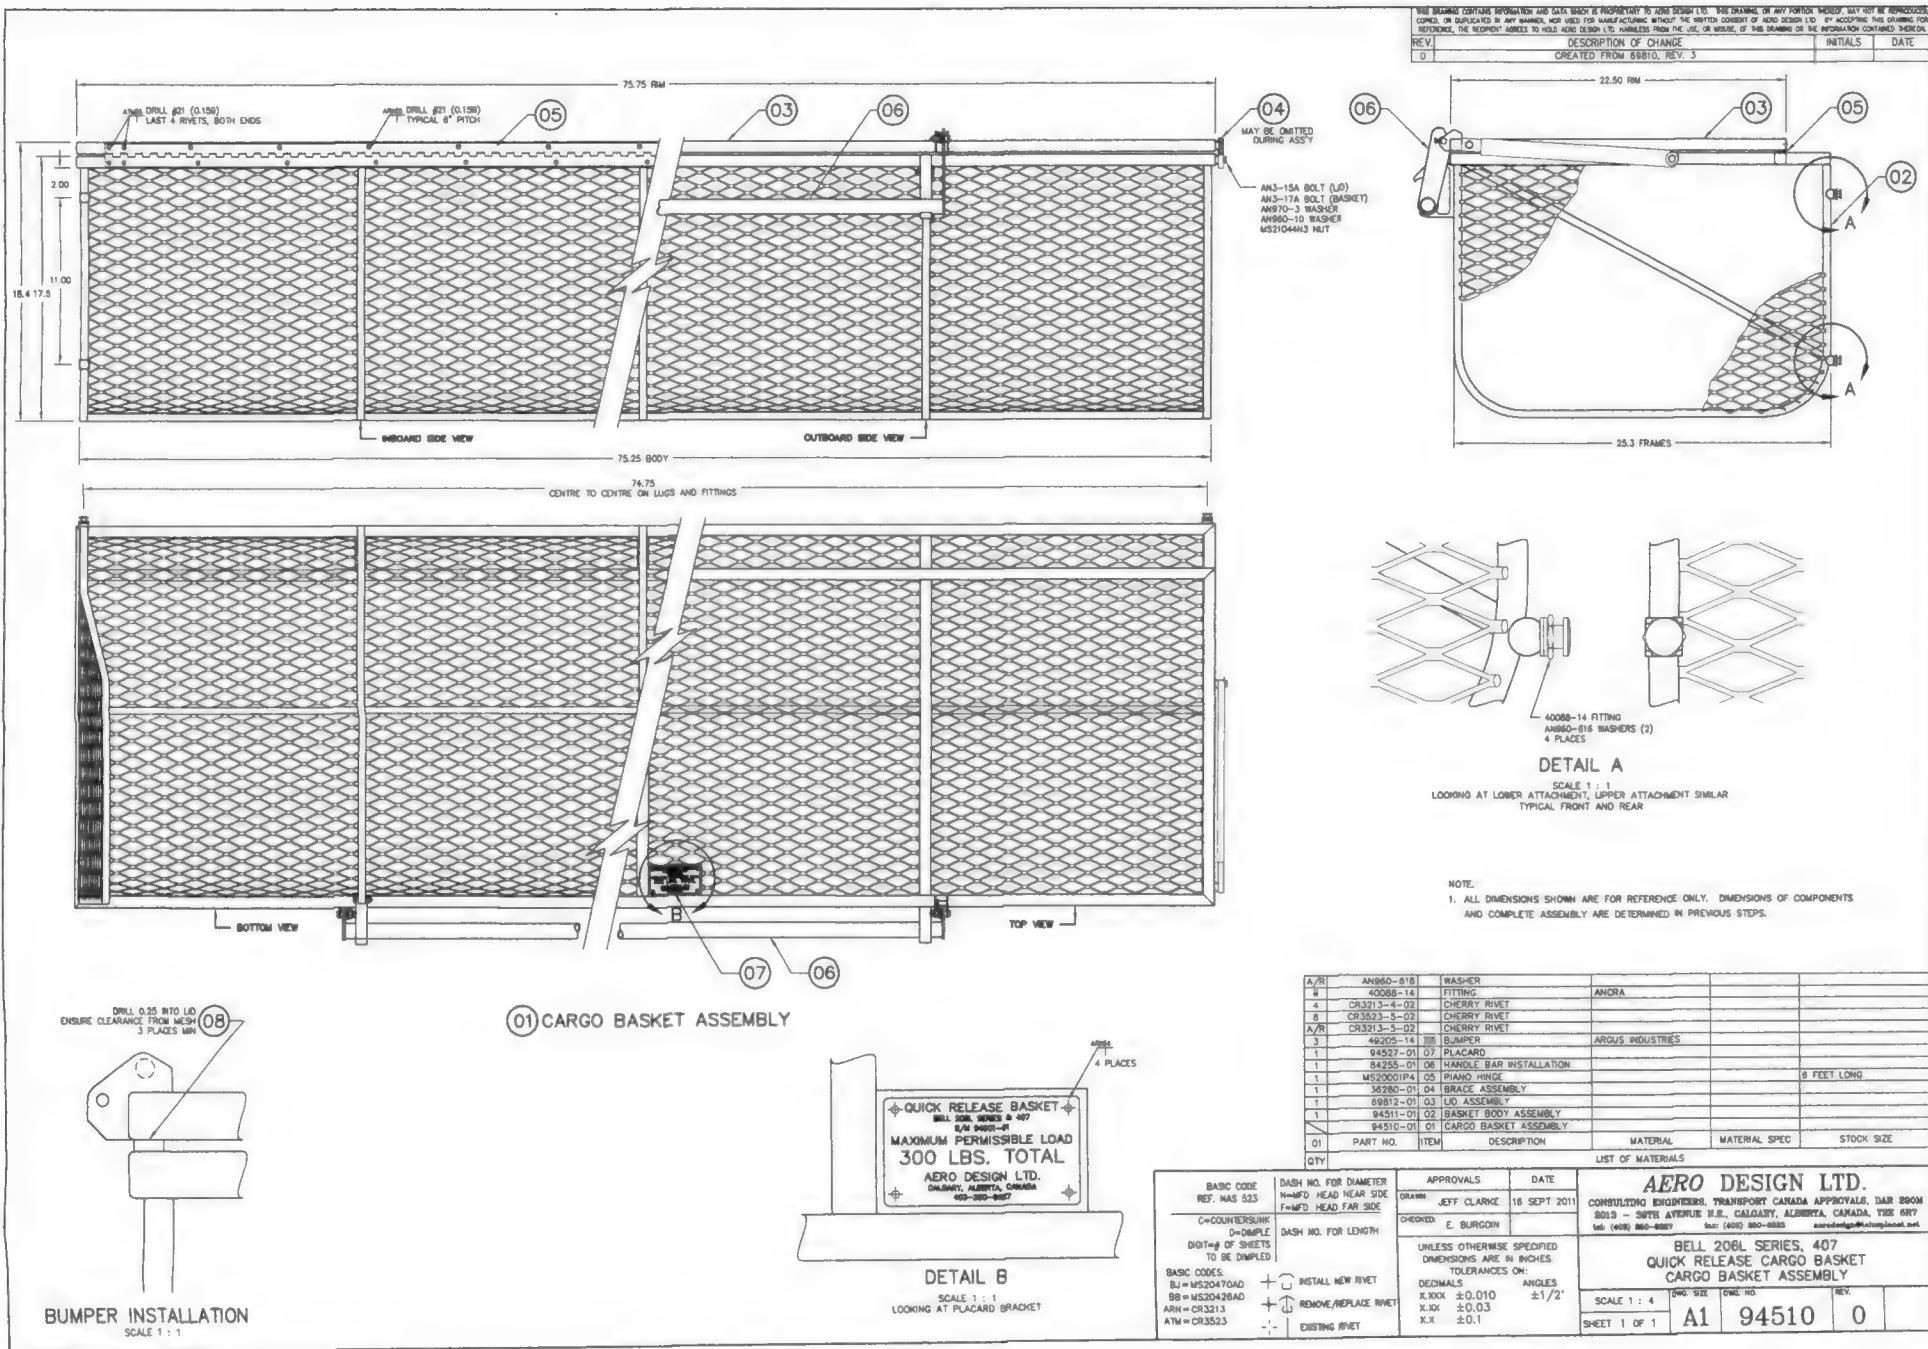

NOTICE


THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	ORIGINAL ISSUE		

NOTES

- ENGRAVE 0.007 DEEP AS FOLLOWS:
 "QUICK RELEASE BASKET" - 0.125 HIGH
 "BELL 206L SERIES & 407" - 0.080 HIGH
 "S/N 94501-XX" - 0.080 HIGH
 "MAXIMUM PERMISSIBLE LOAD" - 0.125 HIGH
 "300 LBS. TOTAL" - 0.200 HIGH
 "AERO DESIGN LTD." - 0.125 HIGH
 "CALGARY, ALBERTA, CANADA" - 0.080 HIGH
 "403-250-8027" - 0.080 HIGH

DRILL #30 (0.129)
4 PLACES

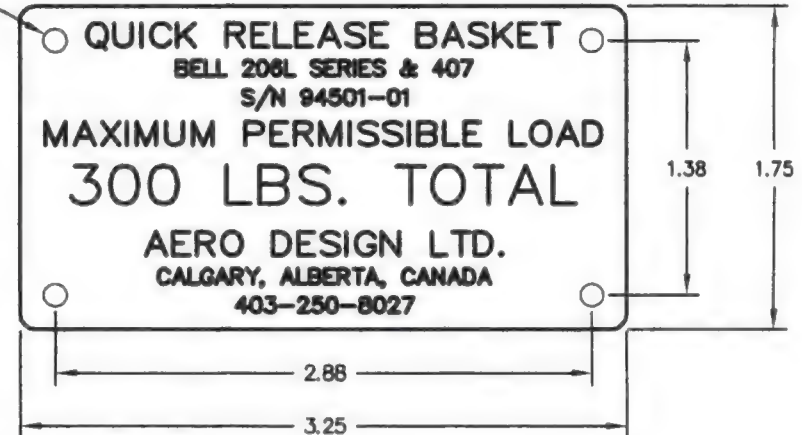

01 PLACARD

1	94527-01	01	PLACARD	6061-T6 ALUMINUM	QQ-A-250/11	0.050 SHEET
01	PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE
QTY	LIST OF MATERIALS					
			APPROVALS	DATE	AERO DESIGN LTD. CONSULTING ENGINEERS, TRANSPORT CANADA APPROVALS, DAR 290M 2013 - 39TH AVENUE N.E., CALGARY, ALBERTA, CANADA, T2E 6R7 tel: (403) 250-8027 fax: (403) 250-8333 aerodesign@telusplanet.net	
			DRAWN: JEFF CLARKE	16 SEPT 2011		
			CHECKED: E. BURGOIN			
			UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ON: DECIMALS ANGLES X.XXX ±0.010 ±1/2" X.XX ±0.03 X.X ±0.1		BELL 206L SERIES, 407 QUICK RELEASE CARGO BASKET PLACARD	
			SCALE 1 : 1	DWG. SIZE	DWG. NO.	REV.
			SHEET 1 OF 1	A1	94527	0



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity:	1	
PN:	Tread Plate	
Aircraft:	All	Model: N/A
Description:	Lid Walkway Checker Plate	
Supplier:	Daigle Marine	
Color:	Aluminum	
WO#:	N/A	PO# 14074



WO# _____

Additional details on
build sheet.

WO# _____

[illegible]

Aero Design


Parts Distribution Sheet

Description: Beam Pin

WO# N/A

[illegible]

1. Approving Civil Aviation Authority/Country Transport Canada		2. AUTHORIZED RELEASE CERTIFICATE FORM ONE			3. Form Tracking No.	
4. Organization Name and Address AERO Design Ltd. – 9888A Malaspina Road, Powell River, BC, V8A 0G3					5. Work Order/Contract/Invoice WO 2015-22	
6. Item	7. Description	8. Part Number	9. Qty.	10. Serial/Batch No.	11. Status/Work	
	Cargo Basket	94510-01	1	94501-21	New	
12. Remarks Modified with Front End Cutout and Lid Walkway IAW DCL704						
13a. Certifies that the items identified above were manufactured in conformity to: <input checked="" type="checkbox"/> Approved design data and are in condition for safe operation. <input type="checkbox"/> Non approved design data specified in block 12.				14a. <input type="checkbox"/> CAR 571.10 Maintenance Release <input type="checkbox"/> Other regulation specified in block 12 Certifies that unless otherwise specified in block 12, the work identified in block 11 and described in block 12, has been performed in compliance with the Canadian Aviation Regulations.		
13b. Signature <i>Jeff Clarke AD02</i>		13c. Approved Organization Number AMF 73-04		14b. Signature		14c. Approved Organization Number
13d. Name Jeff Clarke – AD02		13e. Date (dd/mmm/yyyy) 25 Feb 2015		14d. Name		14e. Date (dd/mmm/yyyy)
<p align="center">Installer Responsibilities</p> <p>This certificate does not constitute authority to install.</p> <p>Installers working in accordance with the national regulations of a country other than that specified in block 1 must ensure that their regulations recognize certifications from the country specified.</p> <p>Statements in blocks 13a or 14a do not constitute installation certification. In all cases, the technical record for the aircraft must contain an installation certification issued in accordance with the applicable national regulations before the aircraft may be flown.</p>						

1. Approving Civil Aviation Authority/Country Transport Canada		2. AUTHORIZED RELEASE CERTIFICATE FORM ONE			3. Form Tracking No.	
4. Organization Name and Address AERO Design Ltd. – 9888A Malaspina Road, Powell River, BC, V8A 0G3					5. Work Order/Contract/Invoice WO 2015-22	
6. Item	7. Description Cargo Basket	8. Part Number 94510-01	9. Qty. 1	10. Serial/Batch No. 94501-21	11. Status/Work New	
12. Remarks Modified with Front End Cutout and Lid Walkway IAW DCL704						
13a. Certifies that the items identified above were manufactured in conformity to:			14a. <input type="checkbox"/> CAR 571.10 Maintenance Release <input type="checkbox"/> Other regulation specified in block 12			
<input checked="" type="checkbox"/> Approved design data and are in condition for safe operation. <input type="checkbox"/> Non approved design data specified in block 12.			Certifies that unless otherwise specified in block 12, the work identified in block 11 and described in block 12, has been performed in compliance with the Canadian Aviation Regulations.			
13b. Signature  AD02		13c. Approved Organization Number AMF 73-04		14b. Signature		14c. Approved Organization Number
13d. Name Jeff Clarke – AD02		13e. Date (dd/mmm/yyyy) 26 June 2015		14d. Name		14e. Date (dd/mmm/yyyy)
<p style="text-align: center;">Installer Responsibilities</p> <p>This certificate does not constitute authority to install.</p> <p>Installers working in accordance with the national regulations of a country other than that specified in block 1 must ensure that their regulations recognize certifications from the country specified.</p> <p>Statements in blocks 13a or 14a do not constitute installation certification. In all cases, the technical record for the aircraft must contain an installation certification issued in accordance with the applicable national regulations before the aircraft may be flown.</p>						

HRC / UNIVERSITY